

Energy Parameters Season Peak

Defines the eight season peaks start and end times

Season Types

1. Summer Night
2. Summer Morning Peak
3. Summer Evening Peak
4. Sumer Off Peak
5. Winter Night
6. Winter Morning Peak
7. Winter Evening Peak
8. Winter Off Peak

Energy



Configuration

Priority

Network Loss Factors

Energy Parameters

Energy Parameters

Search Add Edit Delete Print Grid Import / Export

Country: New Zealand

Public Holidays Daylight Savings Time Peaks Time Period Time Defined Season **Season Peak**

Page 1 of 1 Remove Paging:

Country	Icon	Season	Season Type	Season Time
New Zealand	●	Summer	Night	00:00 - 07:00
New Zealand	●	Winter	Night	00:00 - 07:00
New Zealand	●	Summer	Morning Peak	07:00 - 11:00
New Zealand	●	Winter	Morning Peak	07:00 - 11:00
New Zealand	●	Summer	Off Peak	11:00 - 17:00
New Zealand	●	Winter	Off Peak	11:00 - 17:00
New Zealand	●	Summer	Evening Peak	17:00 - 21:00
New Zealand	●	Winter	Evening Peak	17:00 - 21:00
New Zealand	●	Winter	Night	21:00 - 00:00
New Zealand	●	Summer	Night	21:00 - 00:00

Add / Edit Season Peaks

Season Peak

Country:

New Zealand

Season:

Summer

Season Type:

Night

Icon:

Circle Green

Start Time:

00:00

End Time:

07:00

Country	Define the country for the season
Season	Select whether this is summer or winter month
Season Type	Select the Season Type - there are eight
Icon	Select icon for Season Peak
Start time	Select the start time a day starts in this month
End Time	Select the start time a day ends in this month

Revision #2
Created 27 June 2024 22:01:36 by Malcolm
Updated 4 May 2026 19:42:48 by Paige